

LBW-50 to IO-RAL-HU Wiring diagram

LBW-50 to Remote Alarm Wiring

